

SANGHA

Modèle : MK 2080WC

Ensemble clavier multimédia et souris optique sans-fil Manuel d'utilisation



**Remarque : Pour utiliser cet ensemble correctement,
veuillez lire attentivement ce manuel.**

French

Installation des piles

Le clavier sans-fil utilise deux piles AAA alcaline, la souris sans-fil utilise deux piles AAA rechargeables Ni-MH.

Installation des piles de la souris

Etape 1 Ouvrez le compartiment à piles

Etape 2 Insérez les piles comme indiqué dans le compartiment

Etape 3 Remettez le couvercle en place




Installation des piles dans le clavier

Etape 1 Ouvrez le compartiment à piles sous le clavier


Etape 2 Insérez les piles comme indiqué dans le compartiment

Etape 3 Remettez le couvercle en place

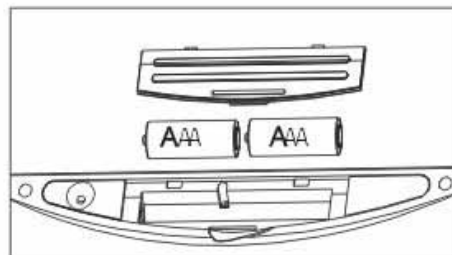


Connexion du récepteur

Le récepteur se connecte à l'ordinateur via un câble USB de 1.5 M sur un port USB.



USB Port

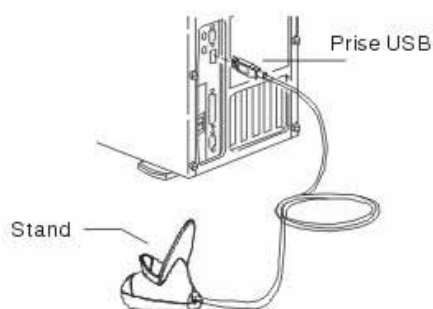

Installation du port USB

1. Branchez la prise USB sur un port USB

Attention :

Il vous faut au moins Windows 98SE pour faire fonctionner le port USB. Selon la version, il se peut qu'il vous faille insérer le CD d'installation de windows pour pouvoir installer le récepteur

Indicateur sur le récepteur

Il y a deux indicateurs lumineux sur le récepteur

1. Connect : L'indicateur clignote lorsque vous appuyez sur le bouton connect. Lorsque le récepteur réussit le changement d'ID, l'indicateur clignote rapidement.
2. Charging : L'indicateur s'allume lorsque les piles de la souris sont en train de charger. Il s'éteint lorsque les piles sont chargées

Connect Indicator Charge Indicator




French

Changement de canal et d'ID de sécurité

La souris et le clavier fonctionnent avec un canal et plusieurs ID possibles, ce qui permet au récepteur de faire fonctionner le clavier et la souris simultanément. Si vous rencontrez des interférences d'autres appareils sans-fil, veuillez effectuer les étapes suivantes :

1. Appuyez sur le bouton connect sous le clavier
2. Appuyez sur le bouton connect du récepteur
3. Appuyez sur le bouton connect sous la souris.

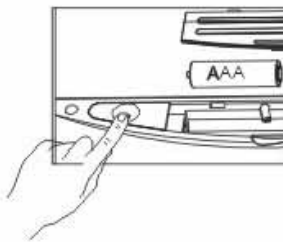

Remarque :

1. La led s'allume en continu lorsque la synchronisation est réalisée.
2. Vous devez effectuer cette opération à chaque fois que vous remplacez les piles.

Fonction mise en veille de la souris

Appuyez sur le bouton connect de la souris pendant 3 secondes pour la mettre en veille, réappuyez sur le bouton pour la rallumer

Charge des piles de la souris

Votre souris fonctionne avec deux piles rechargeables AAA Ni-MH. Avant de vous servir de la souris, il faut la placer sur son socle et la laisser charger pendant 12 heures. Ceci est capitale pour assurer aux piles une durée de vie convenable. Vérifier que l'indicateur de charge est allumé lorsque vous chargez la souris.

Si vous constatez que la souris fonctionne de manière erratique, cela signifie que les piles ont besoin d'être rechargées. Veuillez placer la souris sur son stand et l'y laisser pendant environ 12 heures (ou jusqu'à ce que l'indicateur soit éteint)

Attention : Certains ordinateurs coupent l'alimentation aux ports USB lorsqu'ils sont éteints, ce qui empêche la charge des piles. Dans ce cas de figure, il vous faut laisser votre ordinateur allumé pour effectuer la charge.

Touches Raccourcis

Le clavier possède 13 touches raccourcies

Touches Internet

🏠 Page de démarrage ★ Mes favoris ✉ Email ↻ Rafraîchir
🔍 Rechercher

Touches Multimédia

🎵 Média ✖ Muet ▶/⏸ Marche / Pause
🔊+ Augm. Volume 🔊- Dim. Volume

Touches Bureau

📁 Poste de travail 🖨 Calculatrice

Touches Système

🌙 Mise en veille

Installation du logiciel

Le driver fonctionne sous Win98SE, WinME, Win2K, WinXP

Le driver s'installe automatiquement si la fonction autorun est activée sur votre ordinateur, sinon, il vous faut le lancer manuellement en double-cliquant sur l'icône setup.exe du CD

L'icône de paramétrage de la souris et du clavier apparaît en bas à droite de l'écran après que l'installation se soit achevée.




Paramétrage de la souris

Paramétrage du clavier

Vous pouvez double-cliquer ou faire clic droit pour ouvrir la fenêtre de paramétrage de la souris et du clavier.

Status du verrouillage maj., déf. et num.

Le status est visible sur la barre de tâches (Win2K et WinXP) ou au dessus de la barre de tâches (Win98SE et WinME)

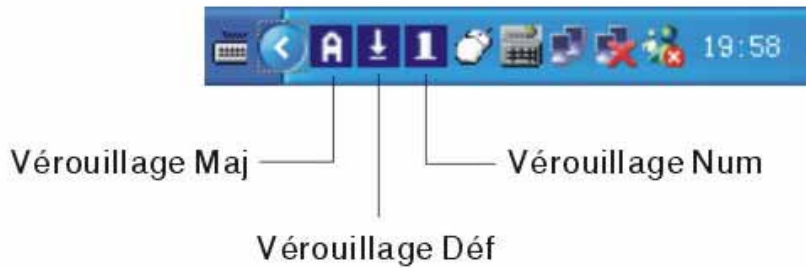

Procédure de démarrage

Installation du driver

Insérez votre CD, il se lance automatiquement.


Etape 1. Choisissez « Wireless Keyboard & mouse driver » puis cliquez sur « Next » pour continuer.



Etape 2 Cliquez sur « Next » pour continuer



Etape 3 Cliquez sur « Next » pour continuer

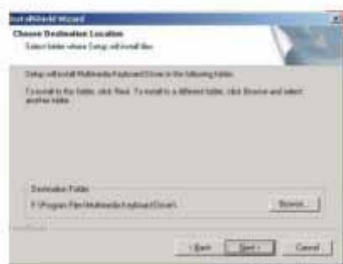

Etape 4 Choisissez « No, I will restart my computer later »




L'installation ci-dessus concerne le clavier, l'installation du driver de la souris s'effectue automatiquement.

Etape 5 Cliquez sur « Next » pour continuer



Etape 6 : Cliquez sur « Next » pour continuer

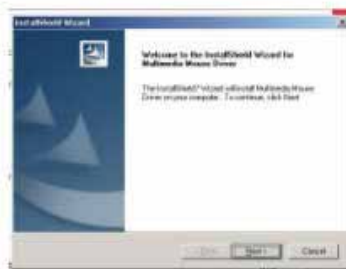

Etape 7 : Choisissez « Yes, to restart the computer » et cliquez sur Terminer.




Remarque :

Si le driver ne se lance automatiquement, veuillez double-cliquez sur l'icône setup.exe du CD

Pour programmer les touches du clavier, en cliquant sur l'icône dans la barre de tâches, vous aurez la fenêtre ci-dessous à l'écran. Vous pouvez personnaliser 6 touches.



Avec cette interface, vous pouvez programmer les touches comme bon vous semble.

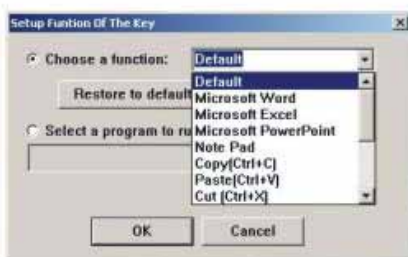

Vous pouvez programmer les touches avec les fonctions suivantes:

- | | |
|-------------------------|-----------------------|
| 1. Microsoft Word | 2. Microsoft Excel |
| 3. Microsoft PowerPoint | 4. Notepad |
| 5. Copie | 6. Coller |
| 7. Couper | 8. Refaire |
| 9. Annuler | 10. Tout sélectionner |
| 11. Rappel Fenêtre | 12. Maximiser |
| 13. Minimizer | 14. Tout minimiser |



Lorsque vous sélectionnez la fonction, cliquez sur OK


Pour la souris

Etape 1 : Double cliquez sur l'icône de paramétrage de la souris

Etape 2. : Cliquez sur configure mouse button

Etape 3 : Sélectionnez le bouton à programmer

Etape 4 : Après avoir effectuer le paramétrage, cliquez sur appliquer puis sur OK pour finir.

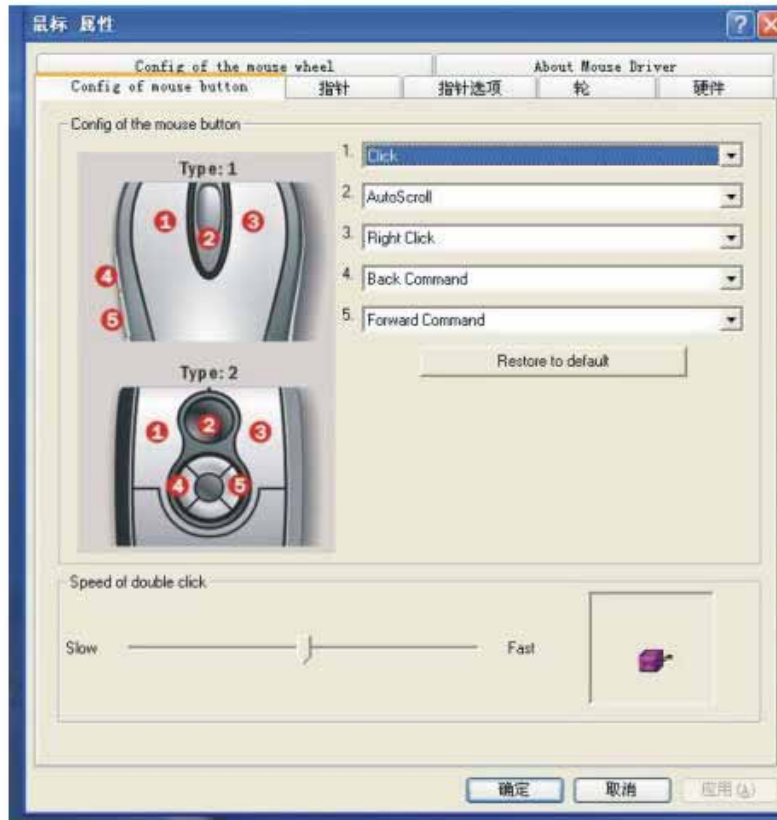

SANGHA

Model:MK 2080WC

Wireless Multimedia Keyboard & Optical Mouse Instruction Manual

English



CAUTION: To use this device properly, please read the user's guide before installation.

Installing the Batteries

Wireless Keyboard use two AAA alkaline batteries, Wireless mouse use two AAA Ni-MH rechargeable batteries.

Installing Batteries in the Mouse

Step 1. Open the battery compartment

Step 2. Insert the batteries as shown inside the battery compartment.

Step 3. Replace the cover.




Install the batteries in the keyboard

Step 1. Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.

Step 2. Insert the batteries as shown inside the battery compartment.


Step 3. Replace the cover.

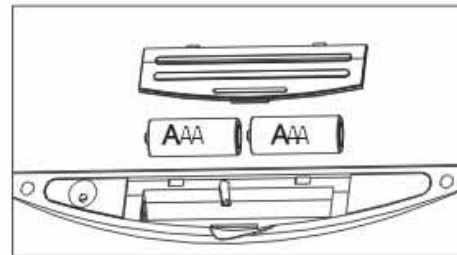


Connecting the Receiver

USB version

The receiver is connected to your computer via a 1.5 meter USB cable, and it plugs into the USB port of your computer.



USB Port

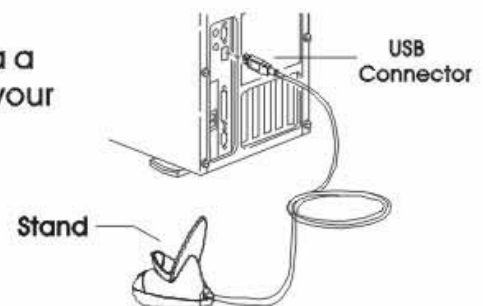

USB port Installation

1. Connect the USB plug to USB port of your computer.

CAUTION:

Windows 98 or higher or Macintosh OS 8.6 or higher is required for USB port installation. Connect the receiver cable to the USB port on computer. For Windows, you may be prompted to insert the Windows software CD. Insert this software CD into the computer's CD-ROM driver when asked to do so. Then follow the on-screen instructions.

Indicators on Receiver

There is two Indicator on the Receiver.

1. **Connect:** the Indicator will flash when you press the connect button. When the receiver successful change the Ids, the Indicator will flash several fast.
2. **Charging:** the Indicator will light on when charging the battery in mouse, the Indicator will turn off when the battery is full.


Connect Indicator Charge Indicator



Changing the channel and security ID

Your mouse and keyboard come with 1 Channel and multi security ID. Which can let your receiver listen to one mouse and one keyboard, Do following step to change channel and security ID when you get undesired interference from another device used nearby..

1. Press the connect button on the bottom of the keyboard.
2. Press the connect button on front of the receiver.
3. Press the connect button on the bottom of the mouse.

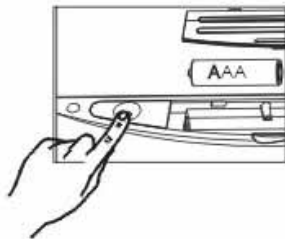

NOTE:

1. The Indicating LED will light steadily when the synchronization linkage is completed.
2. You need to do above steps to re-connect the mouse and keyboard each time you replace battery.
3. Your Keyboard and mouse may have only one channel due to different product version.

Power on/off function for mouse:

Press the connection button and hold for 3 seconds to turn off the power, and press once the button if you want to wake up the mouse.

Charge the Battery in Mouse

Your mouse uses two AAA size NI-MH rechargeable batteries. Before you use the mouse, you need to place the mouse on the stand to charge the batteries for 12 hours. This is very important to battery life. Please make sure the charge indicator is light ON when you charge the mouse.

When you feel your wireless mouse is not working smoothly, that means that the batteries need to be recharged. Please put the mouse on the stand for charging. Normally it will take 12 hours to get the batteries fully charged.

USB charge Version






1. place the mouse on the stand and make sure the charging indicator is light ON.

CAUTION: Some computer will turn off the power of USB port when entering sleep mode. In this case, the battery inside the mouse can not be charged. So you are requested to keep your computer always ON When you charge the mouse

Hotkeys

The keyboard have 13 hotkeys located on the keyboard.

Internet hotkeys

 Web home  My favourite  Email  Refresh
 Search


Multimedia hotkeys

 Media  Mute  Play/pause
 Volume UP  Volume Down

PC Hotkeys

 My Computer  Calculator

Power manage hotkeys


 Sleep

Software Installation

The driver supports Win95, Win98, Win 98/SE, Win 2000 and Win XP.

The driver will install automatically if the auto-run is enable in your computer, otherwise, you can manually launch the installation by double clicking the file setup.exe in the CD-ROM.


The setup applet s icon of the keyboard and the mouse will appear on the windows taskbar after successfully completing software installation.

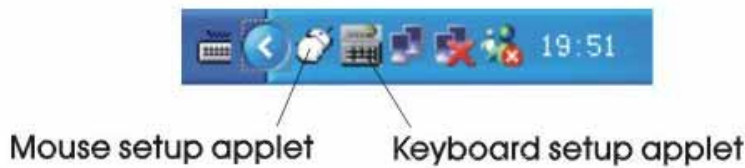

You can double click or right click the applet, and setup the functions of your preferred selection for both keyboard and mouse to enhance your device

Scroll, Caps, Num Lock status

The scroll, Caps, Num lock status are shown on the taskbar (Win 2K and Win xp) or above the taskbar (win 98, win ME)

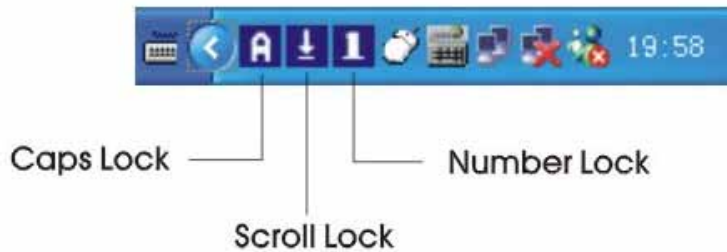

Important Procedure to start!

Installation of driver:

Insert your driver CD, it will run automatically:

Setup 1: Choose Select product Type: "Wireless Keyboard & Mouse Driver" and then click "Next" to continue



Setup 2: Click "Next" to continue



Setup 3: Click "Next" to continue



Setup 4: Choose "NO,I will restart my computer later."



For the above installation is for keyboard only & the driver system will be operated automatically for multimedia mouse

Setup 5: Click "Next" to continue



Setup 6: Click "Next" to continue



Setup 7: Choose "Yes" to restart the computer, click "Finish" the installing.



REMARKS:

If your driver doesn't run automatically, please go to your CD rom drive to run the driver manually.

For program the keyboard :The programmable key layout will display on your screen. You can choose 6 types of key settings, such as refresh, favorite, search media, my computer, calculator




With this interface ,you can program the programmable key to yourself like s .



You can program the programmable key to

- | | |
|-----------------------------|-------------------------|
| 1. Microsoft word | 2. Microsoft excel |
| 3. Microsoft powerpoint | 4. Note pad |
| 5. Copy (ctrl+c) | 6. Paste (ctrl+v) |
| 7. Cut (ctrl+x) | 8. Redo (ctrl+y) |
| 9. Undo (ctrl+z) | 10. Select all (ctrl+A) |
| 11. Recall window (alt+tab) | 12. Maximize |
| 13. Minimize | 14. Minimize all |

English

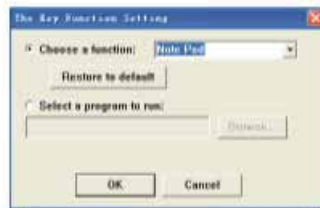

When you select the function for yourself, then please click "OK"

for program the mouse

Setp 1: double click the mouse icon, a mouse properties windows will open

Setp 2: select configure mouse button

Setp 3: select the button you want to program

Setp 4: After your setting is ok, click Apply & then OK to finish

