

SANGHA

Modèle :ID-4696W

French

Bureau Sans-Fil 2,4GHz

Manuel d'utilisation



**Attention : Pour éviter tout problème, veuillez lire ce
manuel attentivement avant toute utilisation.**

Installation des piles


Le clavier et la souris nécessitent chacun deux piles AAA.

Installation des piles dans la souris

Étape 1. Ouvrez le compartiment à piles.

Étape 2. Insérez les piles comme indiqué dans le compartiment.

Étape 3. Remettez le couvercle.

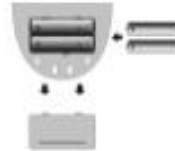


Installation des piles dans le clavier

Étape 1. Ouvrez le compartiment à piles.

Étape 2. Insérez les piles comme indiqué dans le compartiment.

Étape 3. Remettez le couvercle.

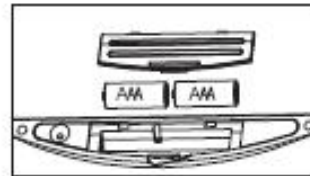

Connexion au récepteur

Le récepteur est connecté à votre ordinateur via un des ports USB de ce dernier.



USB Port



1. Branchez le récepteur dans un port USB de votre ordinateur.
 2. Mettez la souris proche du récepteur (moins de 50 cm) pour effectuer la connexion.
 3. Faites de même avec le clavier.
- Cette étape prend moins de 2 secondes.

Attention:

Il vous faut au moins Windows 98 pour l'utilisation par USB. Sous Windows, il est possible que l'ordinateur vous demande d'insérer le cd d'installation de windows. Suivez les instructions qui apparaissent à l'écran.

Touches Raccourcis

Le clavier a 15 touches raccourcis :

Raccourcis Internet :

🏠 Page d'accueil ★ Mes favoris ✉ Email ↺ Rafraîchir
🔍 Rechercher

Touches multimédia :

🔊 Lecteur Média 🔇 Muet ▶/⏸ Marche / Pause
⏪+ Augm. Volume ⏩ Dim. Volume
⏮ Précédent ⏭ Suivant

Raccourcis Système :

💻 Poste de travail 🖨 Calculatrice 🌙 Veille

Installation Logicielle

Le driver fonctionne sous Win 98SE, WinME, Win 2000 and Win XP.
Le driver s'installe automatiquement si la fonction auto-run est active, sinon, lancez l'installation manuellement en double-cliquant sur l'icône setup.exe sur le CD.

Les icônes de paramétrage du clavier et de la souris apparaissent dans la barre de tâches en bas à droite une fois l'installation finie.



Vous pouvez double-cliquez ou faire un clic droit pour ouvrir l'écran de paramétrage du clavier ou de la souris.

Statut Verrouillage Pavé Num., Défilement et Touches Maj.

Le statut du verrouillage est indiqué dans la barre de tâches (pour Win2K et XP) ou juste au-dessus (pour Win98 et WinME).



Important avant de démarrer !

Installation de driver:

Insérez le CD d'installation, celui-ci démarre automatiquement :

Etape 1: cliquez sur " Setup.exe " pour continuer.



Etape 2: Cliquez sur " Next "



Etape 3: Choisissez " Yes " pour redémarrer l'ordinateur et cliquez sur " Finish " pour finaliser l'installation.



Remarque:

Si le driver ne démarre pas automatiquement, veuillez aller dans poste de travail et ouvrez le dossier du CD pour lancer l'installation.

Paramétrage du clavier : L'ensemble des touches raccourcis programmables apparaît à l'écran. Vous pouvez choisir 8 différentes fonctions : Précédent, Suivant, Lecteur Média, Rafraîchir, Rechercher, Mes Favoris, Poste de travail, Calculatrice.



Avec cette interface, vous pouvez paramétrer les touches comme bon vous semble.



Vous pouvez paramétrer les fonctions suivantes aux touches :

- | | |
|------------------------------|--------------------------------|
| 1. Microsoft word | 2. Microsoft Excel |
| 3. Microsoft powerpoint | 4. Notepad |
| 5. Copier (Ctrl+C) | 6. Coller (Ctrl+V) |
| 7. Couper (Ctrl+X) | 8. Refaire (Ctrl+Y) |
| 9. Annuler (Ctrl+Z) | 10. Tout Sélectionner (Ctrl+A) |
| 11. Rappel Fenêtre (Alt+Tab) | 12. Maximiser |
| 13. Minimiser | 14. Tout Minimiser |

Une fois que vous avez fini de paramétrer les fonctions, cliquez sur "OK".

Pour programmer la souris !

Etape 1 : Double cliquez sur l'icône de la souris, une fenêtre de propriétés apparaît.

Etape 2 : Sélectionnez le bouton à configurer de la souris.

Etape 3 : Sélectionnez la fonction que vous souhaitez assigner au bouton.

Etape 4 : Une fois le paramétrage effectué, cliquez sur appliquer puis sur OK pour terminer.





Model: ID-4696W

2,4GHz Wireless Desktop Instruction Manual

English



CAUTION: To use this device properly, please read the user's guide before installation.

Installing the Batteries


Wireless keyboard and mouse use two AAA alkaline batteries.

Installing Batteries in the mouse.

Step 1. Open the battery compartment.

Step 2. Insert the batteries as shown inside the battery compartment.

Step 3. Replace the cover.

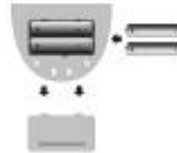

Installing the Batteries in the Keyboard

Step 1. Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it.

Step 2. Insert the batteries as shown inside the battery compartment.

Step 3. Replace the cover.



Connecting the Receiver

USB version

The receiver is connected to your computer via USB port of your computer.



USB Port




1. Plug the Micro receiver into a USB port of your computer.
 2. Put the mouse close to the receiver (within 50 CM) to finish the linking.
 3. Put the keyboard to the receiver (within 50 CM) to finish the linking.
- This step only take less than 2 second.

CAUTION:

Windows 98 or higher or Macintosh OS 8.6 or higher is required for USB port installation. Connect the receiver cable to the USB port on computer. For Windows, you may be prompted to insert the windows software CD. Insert the software CD into the computer's CD-ROM driver when asked to do so. Then follow the on-screen instructions.

Hotkeys on the keyboard

The keyboard have 15 hotkeys located on the keyboard.

Internet Hotkeys**Multimedia Hotkeys****System Hotkeys****Software Installation**

The driver supports Win 98, Win 98SE, WinME, Win 2000 and Win XP. The driver will install automatically if the auto-run is enable in your computer, otherwise, you can manually launch the installation by double clicking the file setup. Exe in the CD-ROM.


The setup applets icon of the keyboard and the mouse will appear on the windows taskbar after successfully completing software installation.



You can double click or right click the applet, and setup the functions of your preferred selection for both keyboard and mouse to enhance your device

Scroll, Caps, Num Lock status

The scroll, Caps, Num lock status are shown on the taskbar (Win 2K and Win xp) or above the taskbar (Win 98 and Win ME)

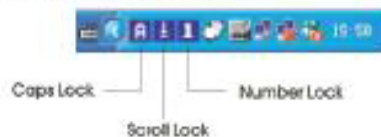


Important Procedure to start!

Installation of driver:
Insert your driver CD, it will run automatically:

Setup 1: click "Setup.exe " to continue.



Setup2: Click "Next" to continue.

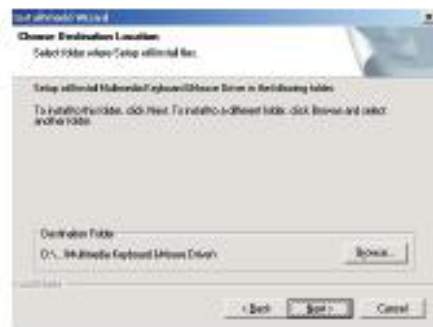

Setup 3: Choose " Yes " to restart the computer, click "Finish " to end the installation.



Remarks:

If your driver doesn't run automatically, please go to your CD ROM drive to run the driver manually.

For program the keyboard: The programmable key layout will display on your screen. You can choose 8 types of key settings, such as Previous Track, Next Track, Media, Refresh, Search, My Favorite, My Computer, and Calculator.



With the interface, you can program the programmable key to yourself likes.



You can program the programmable key to

- | | |
|-----------------------------|-------------------------|
| 1. Microsoft word | 2. Microsoft Excel |
| 3. Microsoft powerpoint | 4. Note pad |
| 5. Copy (Ctrl+C) | 6. Paste (Ctrl+V) |
| 7. Cut (Ctrl+X) | 8. Redo (Ctrl+Y) |
| 9. Undo (Ctrl+Z) | 10. Select all (Ctrl+A) |
| 11. Recall window (Alt+Tab) | 12. Maximize |
| 13. Minimize | 14. Minimize all |

When you select the function for yourself, then please click "OK".

For program the mouse

Step1: Double click the mouse icon, a mouse properties windows will open.

Step2: Select configure mouse button.

Step3: Select the button you want to program.

Step4: After your setting is ok, click "apply" & "OK" to finish.

