

SANGHA

ENCEINTES MULTIMEDIA 2.0

MODELE : SP2106



MANUEL D'UTILISATION (FRENCH)

USER'S MANUAL (ENGLISH)

FRENCH

Précautions d'emploi


Attention

Pour prévenir toute électrocution, n'utilisez pas la prise avec une rallonge ou un receptacle dans lequel la prise ne serait pas complètement enfoncée.

Illustration des connexions


Pour prévenir tout dommages à l'appareil, veuillez éteindre les enceintes et mettre le volume au minimum avant de brancher quoi que ce soit.

1. Connectez la source audio (ordinateur, lecteur CD, lecteur MP3 etc...)
2. Connectez l'alimentation électrique.

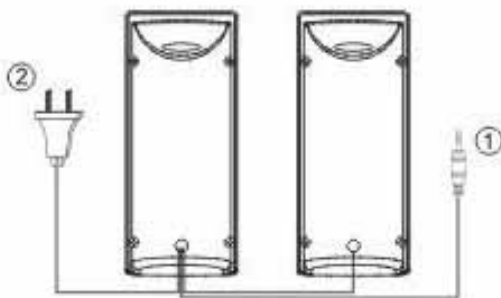


Contenu

1. Manuel d'utilisation
2. Unité principale
3. Unité satellite

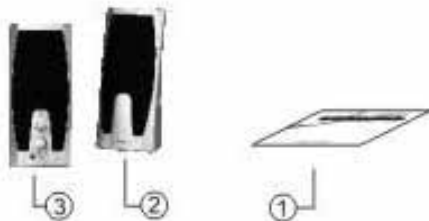

Description des commandes

1. LED : indique l'état des enceintes (allumées / éteintes)
2. Alimentation : Appuyez pour allumer / éteindre
3. Volume : Tournez pour modifier le volume
4. Prise Jack pour Casque

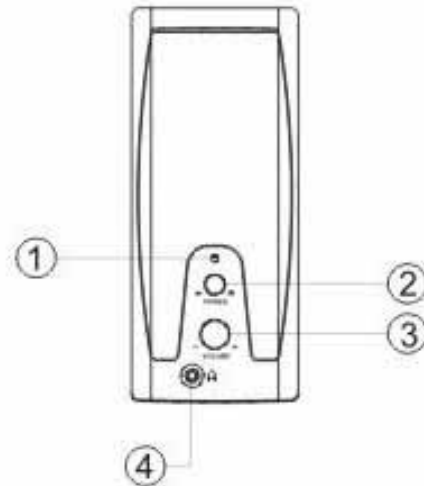

Spécifications

Alimentation.....	AC 230C 50Hz
Puissance totale.....	2W (2x1W)
Fréquence de réponse.....	180 Hz – 20KHz
Rapport S/N.....	>=70 dB
Distortion.....	0.1% @ 0.25W
Unité.....	2 * Portée max 4 ohms
Séparation.....	>= 40dB (1KHz)
Fonction.....	Alimentation, Volume, LED, Prise casque
Dimensions (mm).....	Principal : 73 x 172.5 x 83 Satellite : 73 x 172.5 x 70.5

ENGLISH

SAFETY INSTRUCTIONS


CAUTION

To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

CONNECTIONS ILLUSTRATION


To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

1. Connect to sound sources such as Computer, CD player, MP3, etc.
2. Connect the power supply (**AC power cord may look different depending on the voltage**).

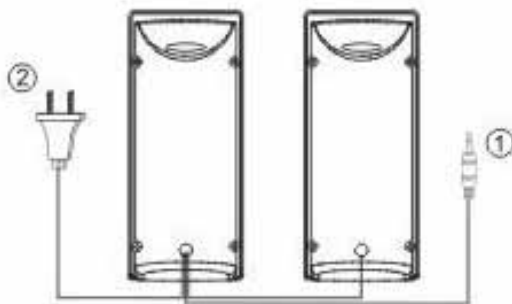


PACKING LIST

- | | |
|----------------------|-----|
| 1. User's manual | 1pc |
| 2. Main speaker | 1pc |
| 3. Satellite speaker | 1pc |

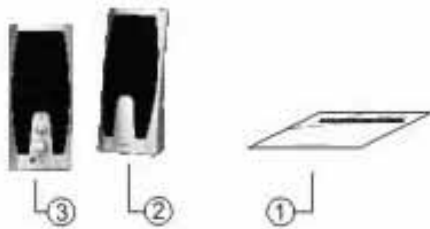

DESCRIPTION OF THE FRONT PANEL OF MAIN

1. LED: To indicate power ON/OFF of the system.
2. Power : Switch for tuning on/off the power
3. Volume: to adjust the master volume of the speaker system.
4. Headphone jack

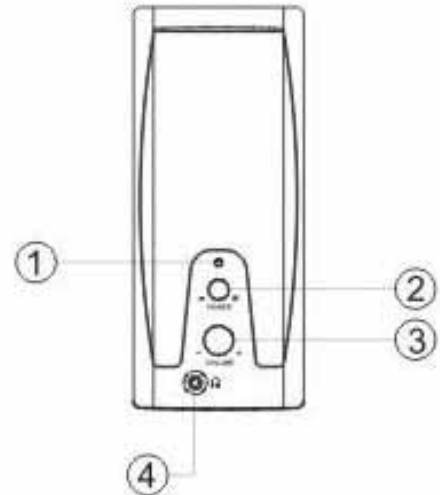

SPECIFICATIONS

POWER INPUT.....	AC 230V 50 Hz
TOTAL SYSTEM POWER.....	2Watts (2x1W)
FREQUENCY RESPONSE.....	180 Hz - 20KHz
S/N RATIO.....	>= 70 dB
DISTORTION.....	0.1% @ 0.25W
DRIVER UNIT.....	2" Full Range 4 Ohms
SEPARATION.....	>= 40 dB (1KHz)
FUNCTION.....	POWER , VOLUME, LED HEADPHONE, MANUAL CONTROL
DIMENSION (mm).....	SW: 73W x 172.5H x 83D SAT: 73W x 172.5H x 70.5D